


# Bayard Control P/N 816 Version 3.163

## Bayard Controller: Recommended Mounting Layout

P/N 816V2

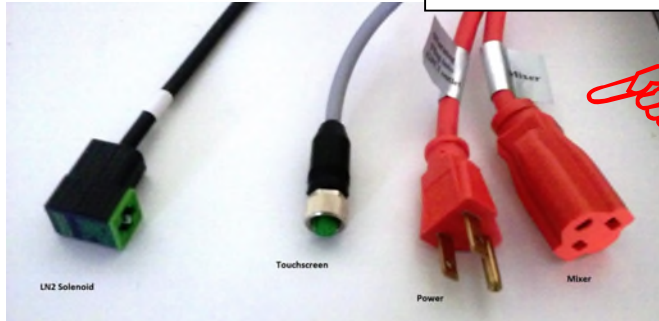


Plug and Play  
Plug LN2 Dosing Mixing  
Control into GFCI  
receptacle.

Touchscreen  
Recipes  
Manual Control  
Automatic Control  
  
Mount above  
splash zone



Controller  
Operator must have access  
to Emergency Stop (E-Stop)

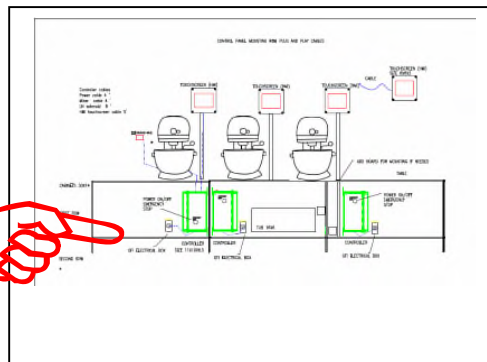

### TECHNICAL SUPPORT

Bayard Machine Control

909.899.1042

[bmc4controls.com](http://bmc4controls.com)

[rb@bmc4controls.com](mailto:rb@bmc4controls.com)

(Please have Part #, Serial # and Software Version # when calling)